



Jobe TRIBAL II

INFLATION MANUAL

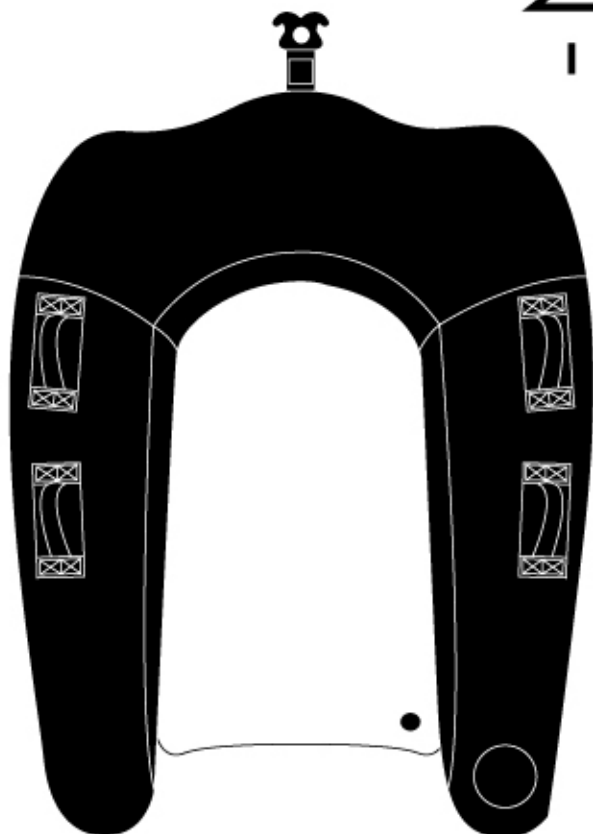

1. Inflate the airfloor.

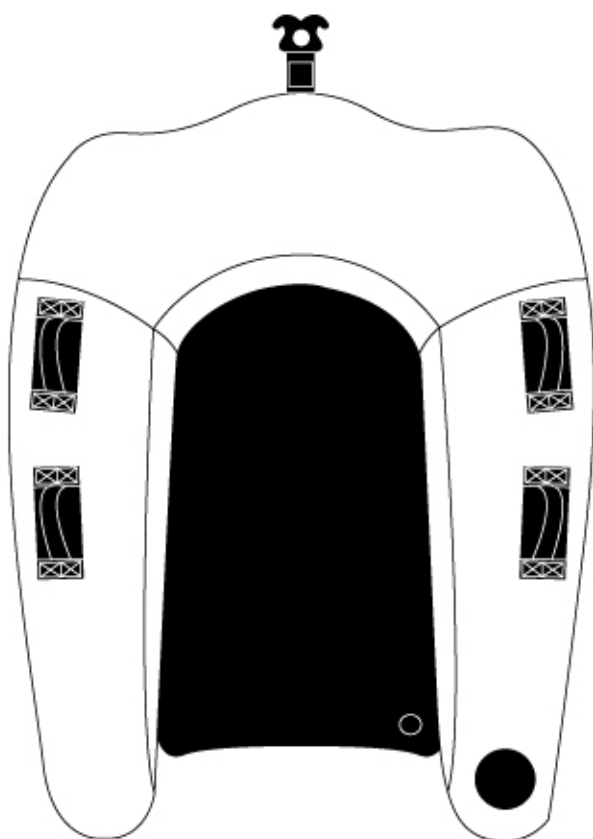

2. Inflate the mainchamber.