

JOBE  × WYCOO

EPIX E-FOIL


QUICKSTART



ASSEMBLY


STEP 1 - INSTALL THE INFLATABLE

- Place the hardcase on a soft surface to prevent scratching.
- Slide the deflated tube around the hardcase from nose to tail. Always start with the 115 liter if you are a beginner!
- Make sure the hardcase is fully seated inside the inflatable.
- Inflate the board to a pressure of 14-20 PSI.

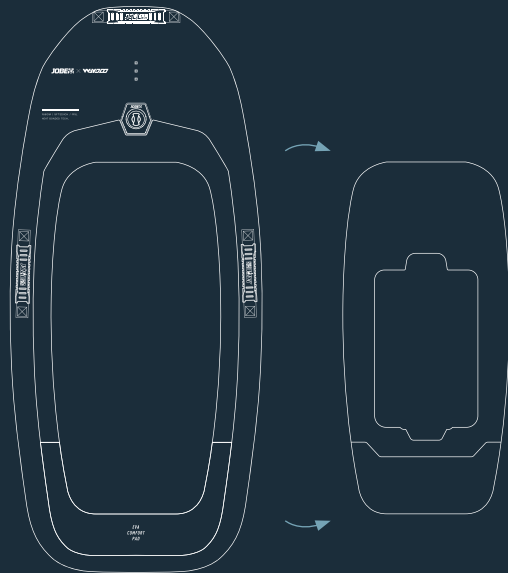

STEP 2 - INSTALL THE BATTERY

- Put the battery in the compartment.
- Press the battery down to ensure it's fully inserted.
- Take the latch out of the remote wrist strap.
- Use it to press and rotate the locks 90 degrees clockwise to secure the battery.

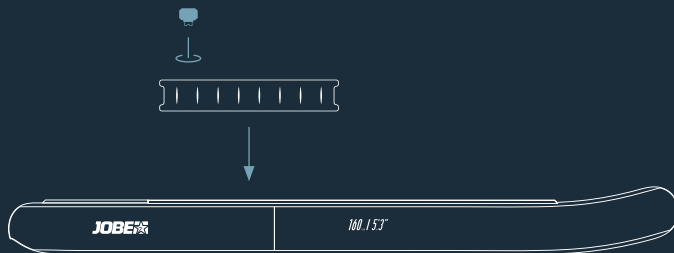


STEP 3 - INSTALL THE MAST

- Attach the mast to the propulsion unit (1).
- Place the board upside down on a flat surface.
- Insert the mast into the board mounting slot (2).
- Tighten all mounting bolts securely.


STEP 4 - INSTALL THE WINGS

- Attach the front wing to the propulsion unit (3).
- Attach the tail wing stabilizer to the propulsion unit (4).
- Tighten all bolts securely.

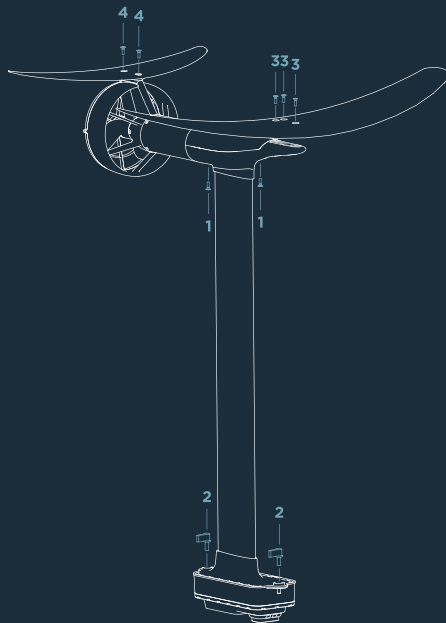

STEP 5 - ATTACH THE REMOTE

- Secure the remote to your wrist using the safety strap.
- Ensure the trigger moves freely.

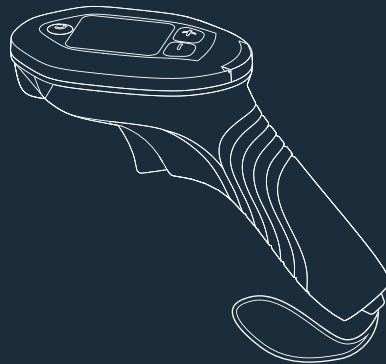

POWERING ON AND OFF


BATTERY

- Press and hold the bottom of the remote against the battery's power button on the board.

REMOTE

- Hold the power button for 3 seconds.
- Wait for automatic connection.
- Hold the '-' button to unlock the remote.



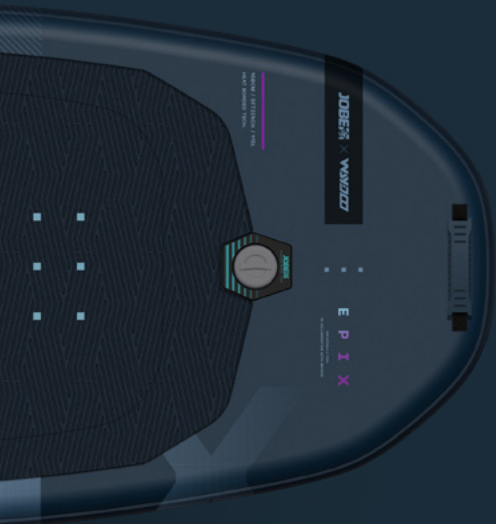

RIDING INSTRUCTIONS

CONTROLS

- Hold the red trigger to accelerate.
- Speed up with '+' button, speed down with '-' button.

FIRST START

1. Lay down flat on the board facing forward.
2. Start accelerating at low speed (gear 5-9).
3. Try to stand up and find your balance.
4. Slowly speed up, find the correct speed to lift.
5. Release the trigger to stop.

WARNINGS



Warning: Always wear approved protective equipment.



Warning: Do not use if damaged or modified.



Warning: The propeller and moving components can cause severe injury. Keep hands, feet, hair, and loose clothing away from all moving parts at all times.



Warning: Avoid swimmers, shallow water, docks or obstacles.



Warning: Use only in water with minimum depth of 1.2m (47”).



Warning: Always fall away from board and foil.



Warning: Keep away from children.



Warning: Use only the supplied charger.



Warning: Never leave the battery unattended while charging.



Warning: Do not place the battery in fire or near open flames.



Warning: Do not expose the battery to temperatures above 45°C (113°F) or below 0°C (32°F).



Warning: Do not charge the battery if it is wet, damaged, swollen, leaking, or overheated.

COMPLETE MANUAL

Scan the QR code for the complete manual.

Scan de QR-code voor de volledige handleiding.

Scannen Sie den QR-Code für das vollständige Handbuch.

Scannez le code QR pour consulter le manuel complet.

Escanee el código QR para ver el manual completo.

Scansiona il codice QR per il manuale completo.

Zeskanuj kod QR, aby uzyskać pełną instrukcję obsługi.

Naskenujte QR kód pro kompletní návod.

Naskenujte QR kód pre kompletný návod.

Skenirajte QR kod za potpuni priru nik.

Skannaa QR-koodi nähdäksesi koko käyttöohjeen.

Tüm kullanım kılavuzu için QR kodunu tarayın.

Skann QR-koden for fullstendig brukermanual.

Σαρώστε τον κωδικό QR για το πλήρες εγχειρίδιο

لمالكه لي لدل اى لع عالطال لة عيرسل اة باجتسال ا زمر حسما

扫描二维码查看完整说明书



www.jobesports.com/manuals

#JOBEMOMENTS

